



## ***The AUTOPA Automatic Rising Bollard***

***AUTOPA recommends that the following maintenance routine is carried out every six months.***

- *Clean the bollard of any dust or other materials that may have settled.*
- *Check that the bollard is not tilted or out of position in any way. If the bollard is damaged, please contact AUTOPA to organise a repair.*

***If the options below have been installed, please perform the following steps.***

- *Test any lights or traffic lights installed are working correctly and are not damaged.*
- *Check any induction loops are working correctly and that the control box is not damaged.*
- *Test the control systems work as expected.*