



The AUTOPA Road Blocker

AUTOPA recommends that the following maintenance routine is carried out every six months.

- Clean the inner part of Road Blocker to remove all dust and dirt.
- Test the multi-LED flashlight incorporated in the Road Blocker, if any lights are not working, please contact AUTOPA to arrange a repair.

If the options below have been installed, please perform the following steps.

- Test any lights or traffic lights installed are working correctly and are not damaged.
- Check any induction loops are working correctly and that the control box is not damaged.
- Test the control systems work as expected.





